

Guide Navigation:

1. Supported Features for the Ecobee Thermostat.
2. How to link Linxura with Ecobee Thermostat.
3. How to use Linxura to control Ecobee Thermostat device.

Ecobee Setup Guide Video Link:

https://youtu.be/3cq6u7AEw_E

1. Supported Features for the Ecobee Thermostat

Ecobee button action description table


Actions	Supported Mode	Description
Click/Double Click	Mode: Heat, Cool, Auto, Eco	Heat: Switch to Heat mode. Cool: Switch to Cool mode. Auto: Switch to Auto mode. Eco: Switch to Eco mode. Off: Turn off the thermostat.
	Temperature: Heat Setpoint, Cool Setpoint	Heat Setpoint: Activate heating when below set temperature. Cool Setpoint: Activate cooling when above set temperature.
Rotate Clockwise/ Rotate Counterclockwise	Temperature Up, Temperature Down	Temperature Up: Raise the temperature by a preset percentage per rotation. Temperature Down: Lower the temperature by a preset percentage per rotation.

2. How to link Linxura with Ecobee Thermostat.


Step1: Make sure your Ecobee Thermostat device is set up in the Ecobee app and functioning properly.

Step 2:


Open your Linxura app and then select the Linxura you want to bind with Ecobee Thermostat.

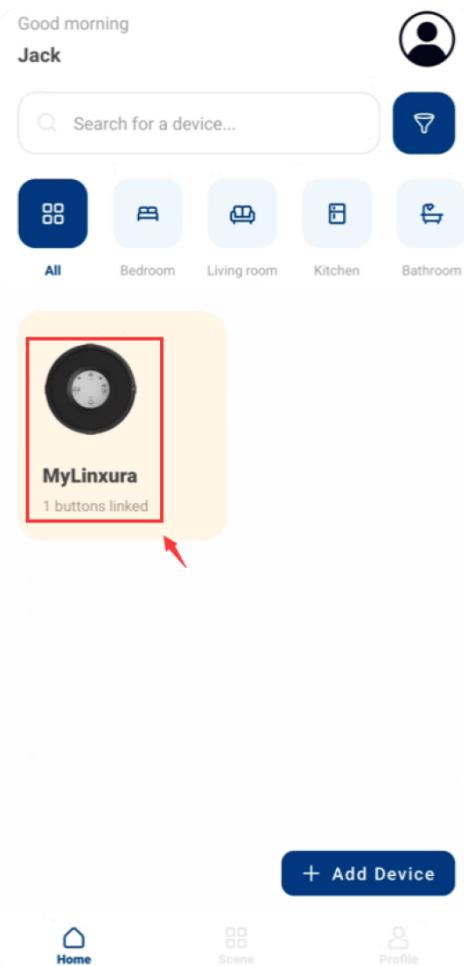


Step 3:
Choose a button.

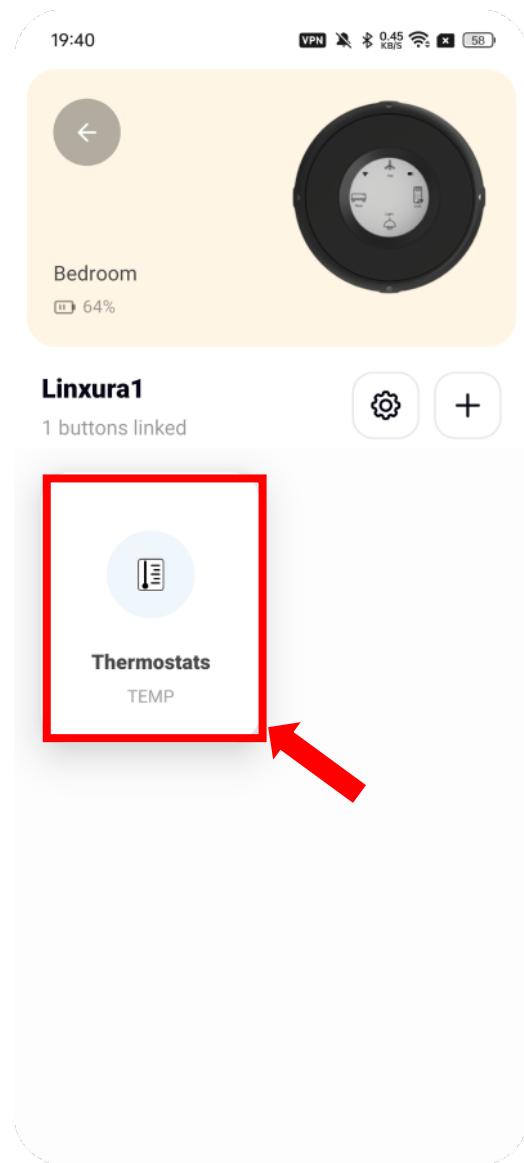

Step 4:
Click 'Select platform'.

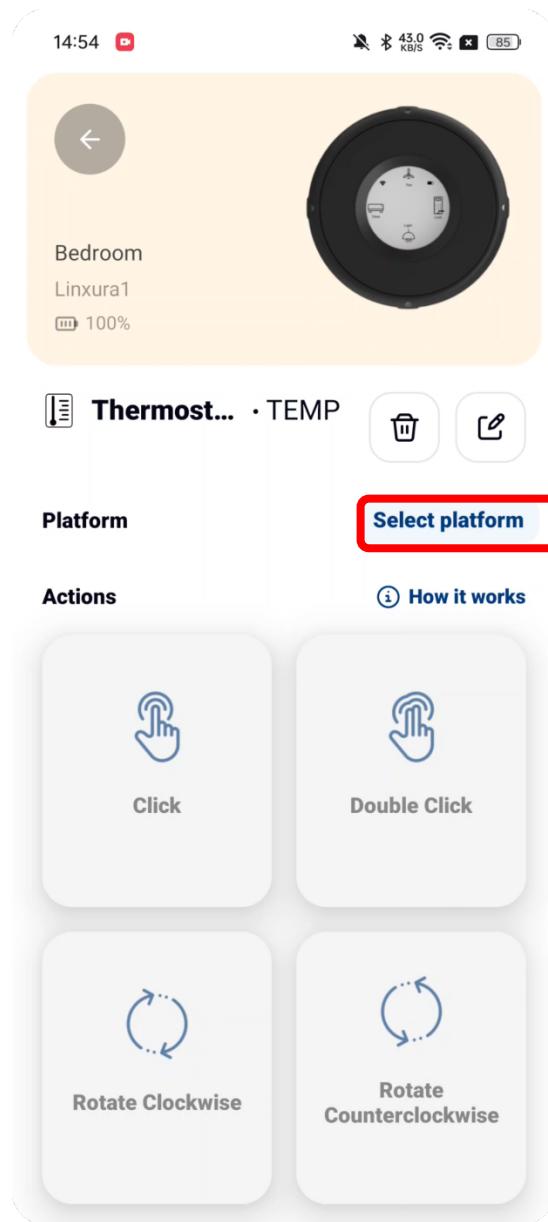


Step 5:
Select 'Ecobee' option.

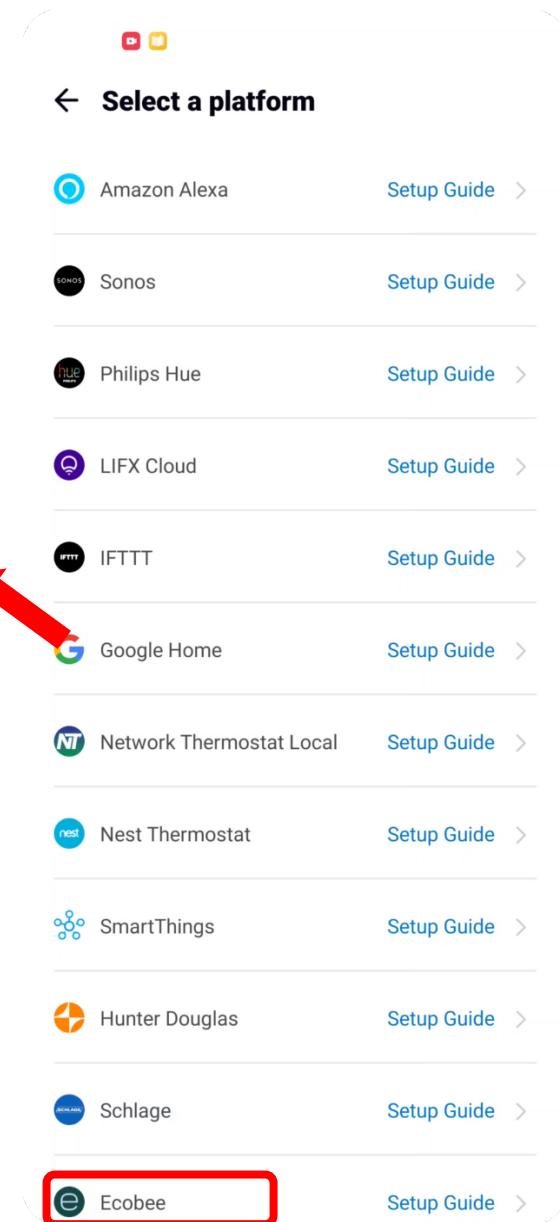


Step 6:

Click 'Confirm' to complete the authorization.

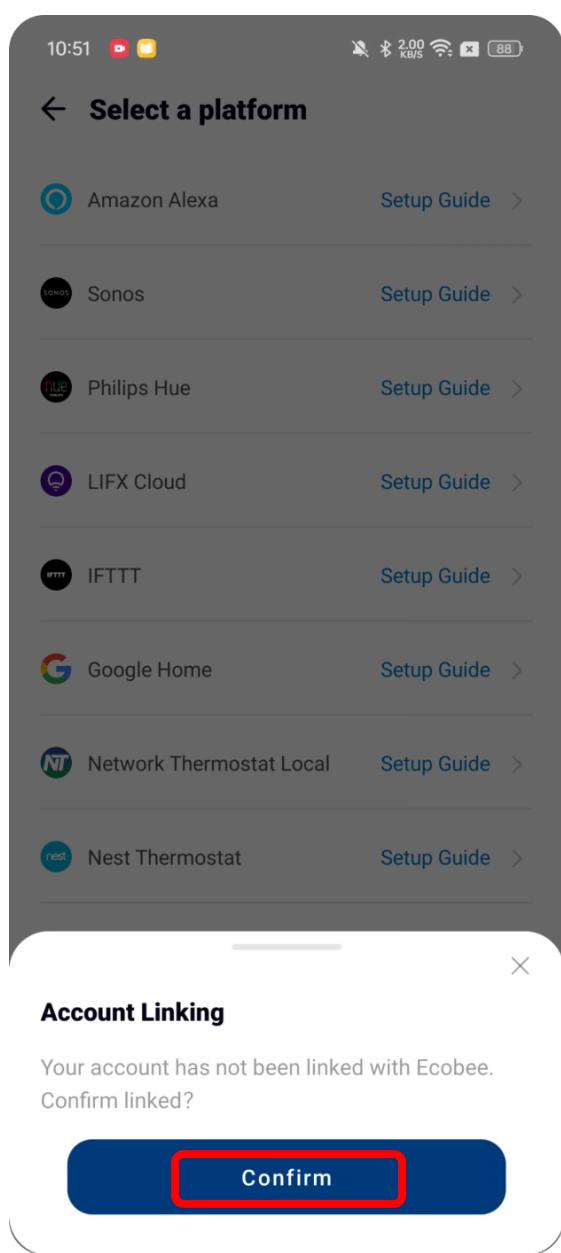


Step 7:

Login to your Ecobee Thermostat account and authorize Linxura.

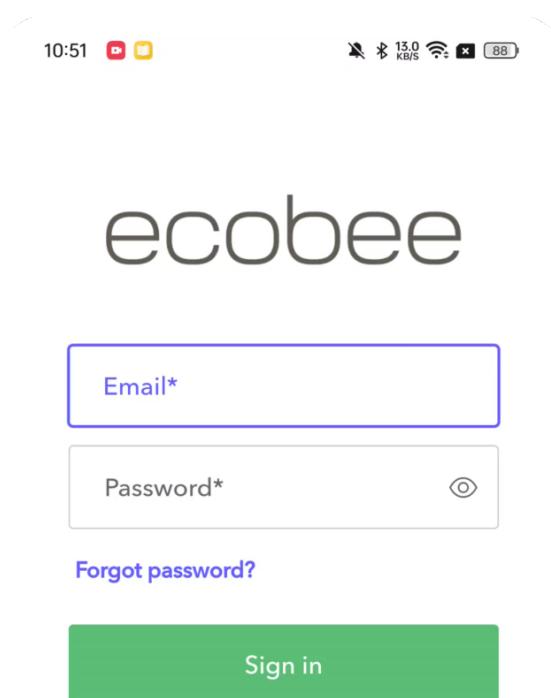

Step 8:

Select the Ecobee Thermostat device and click
'Save'.

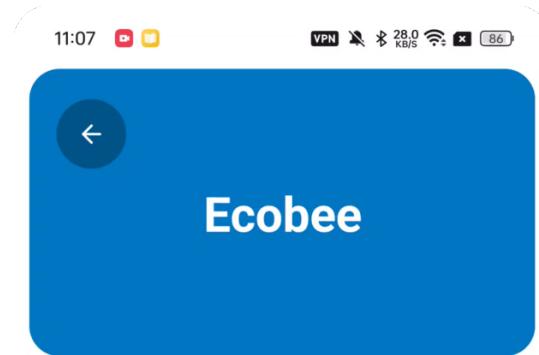

 Ecobee

DEVICE


My ecobee

Save

3. How to use Linxura to control the Ecobee Thermostat device.


Step 1:

Click the '+' icon to add a Click Action.

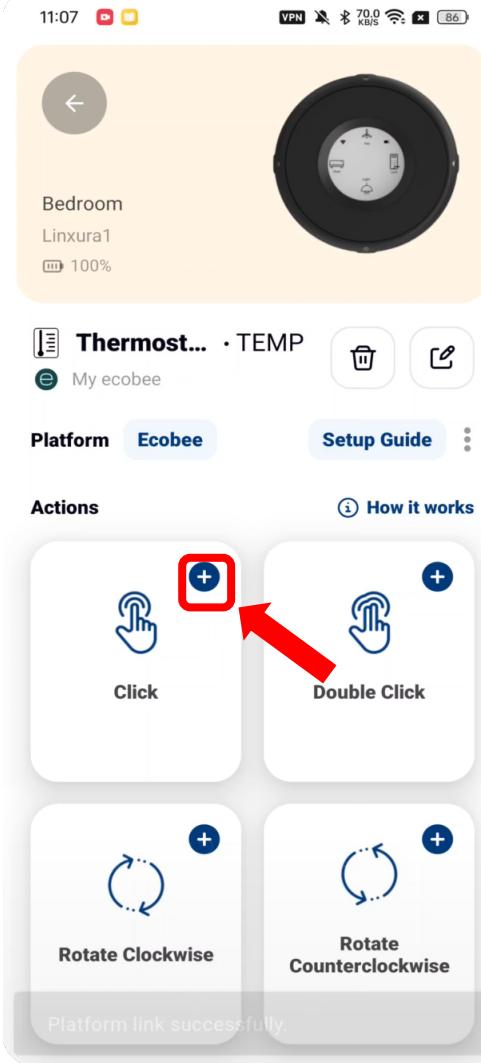


Step 2:


Click 'Mode' and select one of the options.

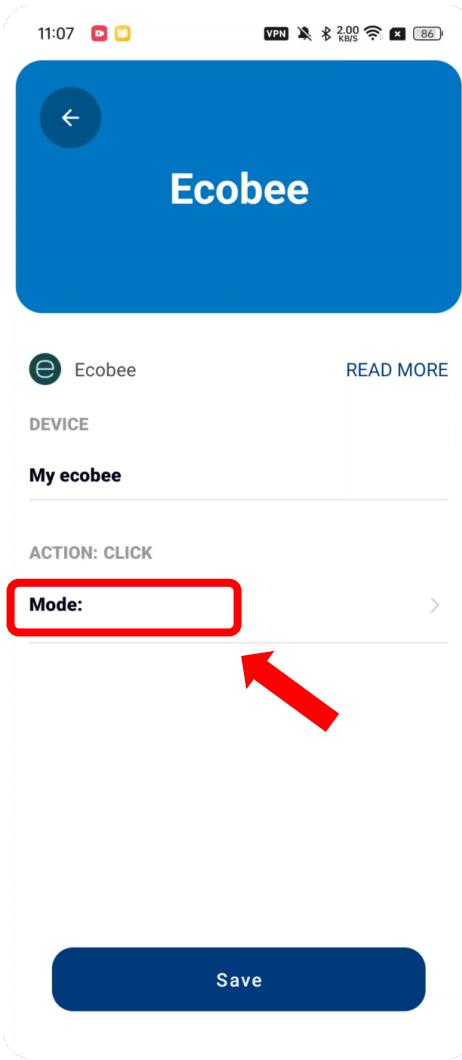


Step 3:
Select a 'Mode'.

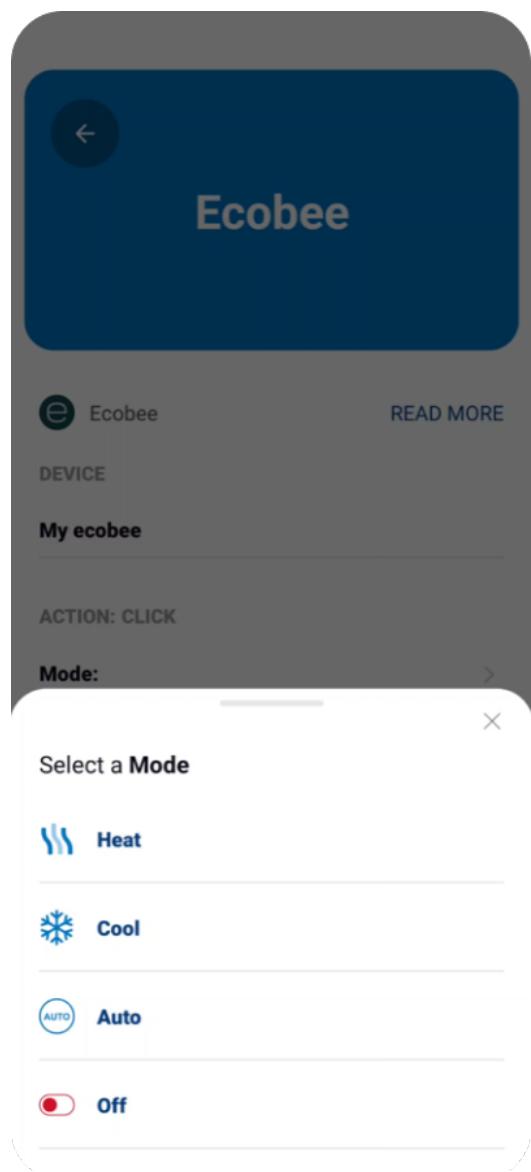


Step 4:
Click 'Temperature'.

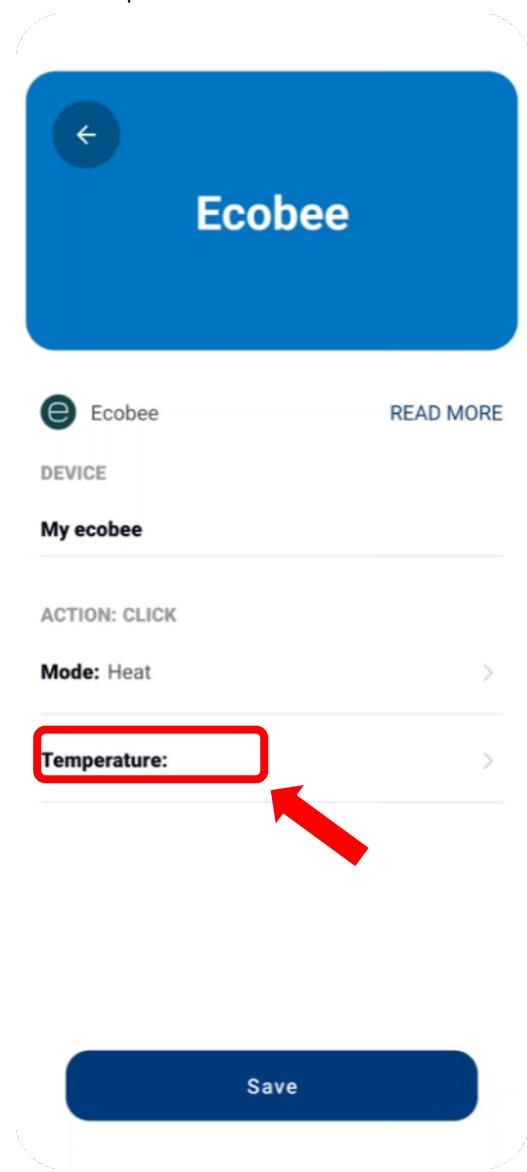

Step 5:
Set the temperature of the Ecobee.

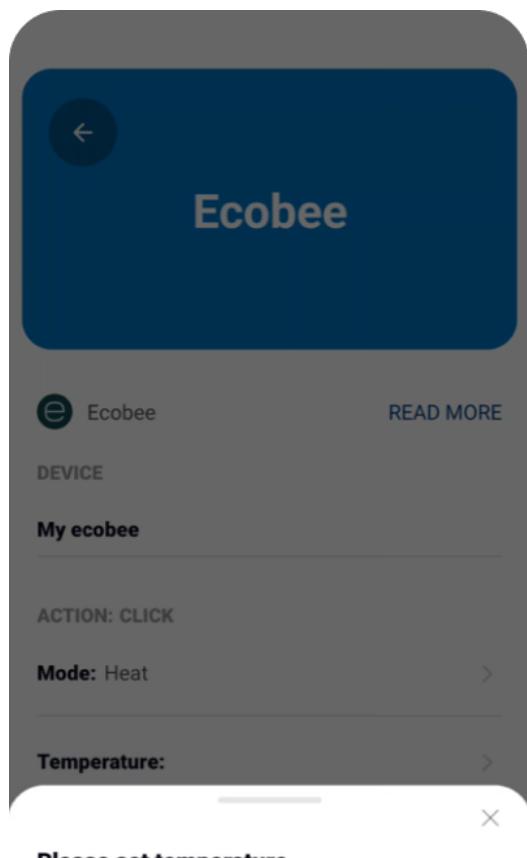

Step 7:
Click the 'Save' to save the configuration.

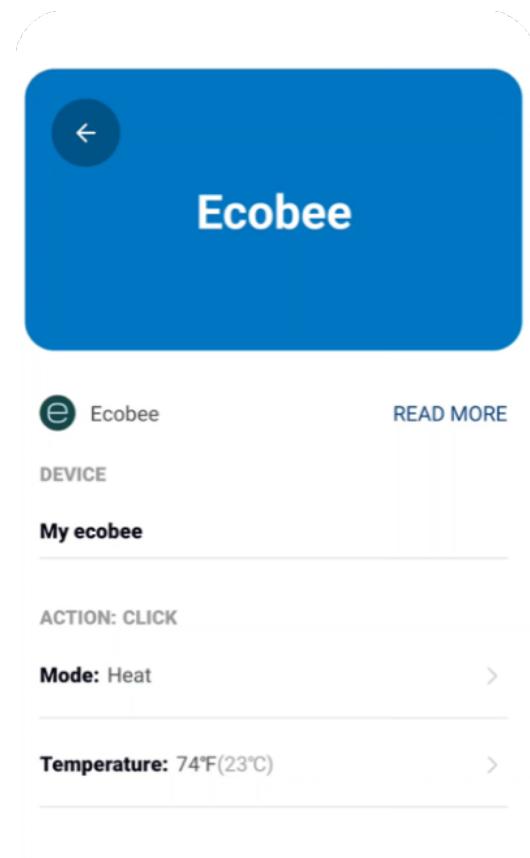

Step 8:

You can follow the same steps to configure Double Click, Rotate Clockwise, and Rotate Counterclockwise.

You can now use Linxura to control your Ecobee Thermostat!

