

Guide Navigation:

1. Supported Features for the Network Thermostat.
2. How to link Linxura with Network Thermostat.
3. How to use Linxura to control Network Thermostat device.

Network Thermostat Setup Guide Video Link:

<https://youtu.be/Nqg3Q67zoko>

1. Supported Features for the Network Thermostat

Network Thermostat button action description table

Actions	Supported Mode	Descriptions
Click/Double Click	Mode: Heat, Cool, Auto, Eco	Heat: Switch to Heat mode. Cool: Switch to Cool mode. Auto: Switch to Auto mode. Eco: Switch to Eco mode. Off: Turn off the thermostat.
	Temperature: Heat Setpoint, Cool Setpoint	Heat Setpoint: Activate heating when below set temperature. Cool Setpoint: Activate cooling when above set temperature.
Rotate Clockwise/ Rotate Counterclockwise	Temperature Up, Temperature Down	Temperature Up: Raise the temperature by a preset percentage per rotation. Temperature Down: Lower the temperature by a preset percentage per rotation.


2. How to link Linxura with Network Thermostat.

Step 1:

Make sure your Network Thermostat device is set up in the Network Thermostat app and functioning properly. **Make sure Linxura, Linxura app, Hunter Douglas are connected to same Wi-Fi network.**


Step 2:

Open your Linxura app and then select the Linxura you want to bind with Network Thermostat.

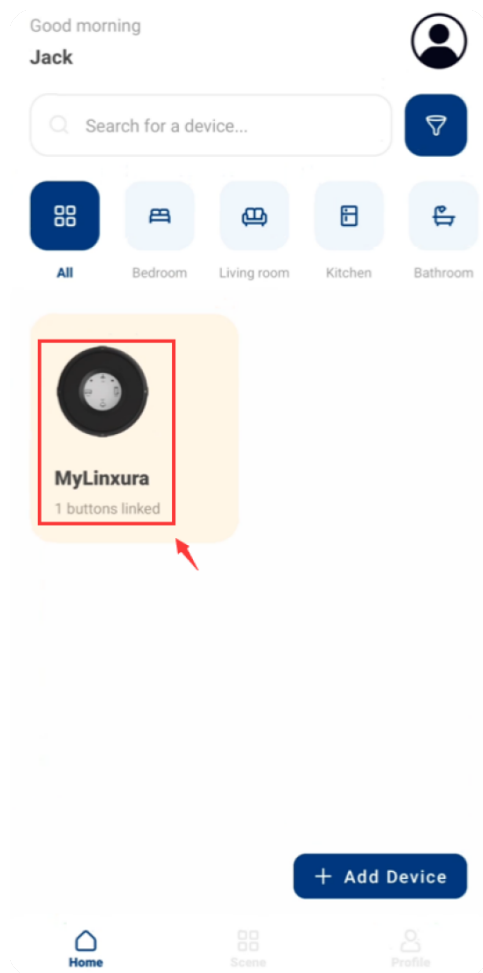


Step 3:


Choose a button.

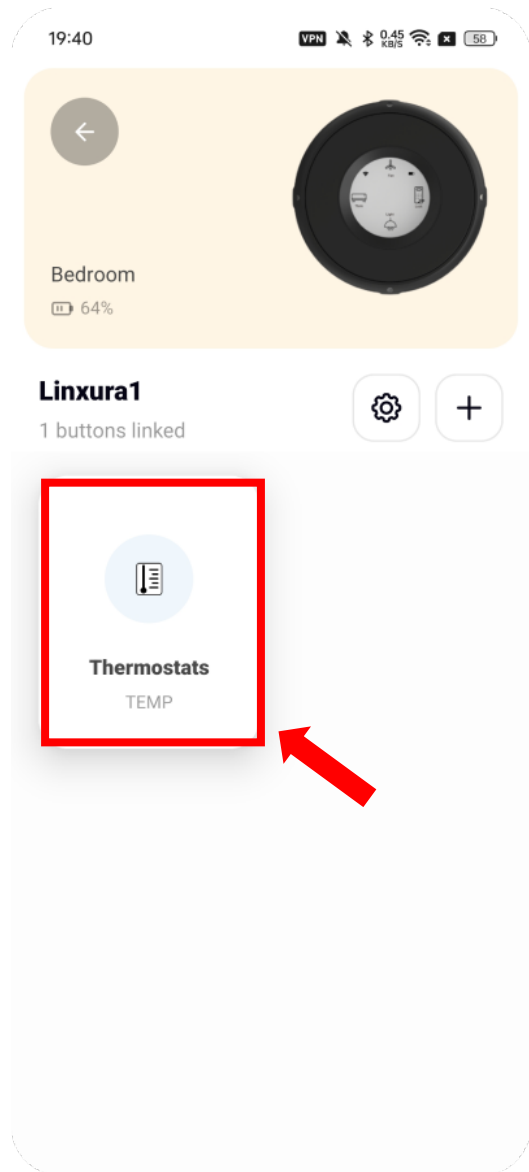

Step 4:
Click 'Select platform'.

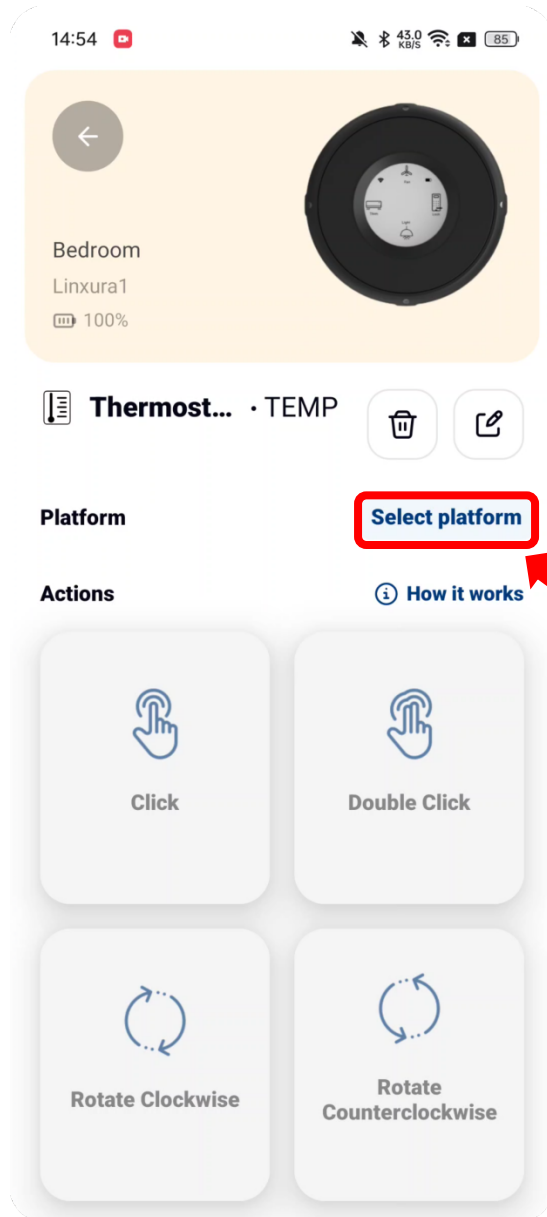

Step 5:
Select 'Network Thermostat' option.

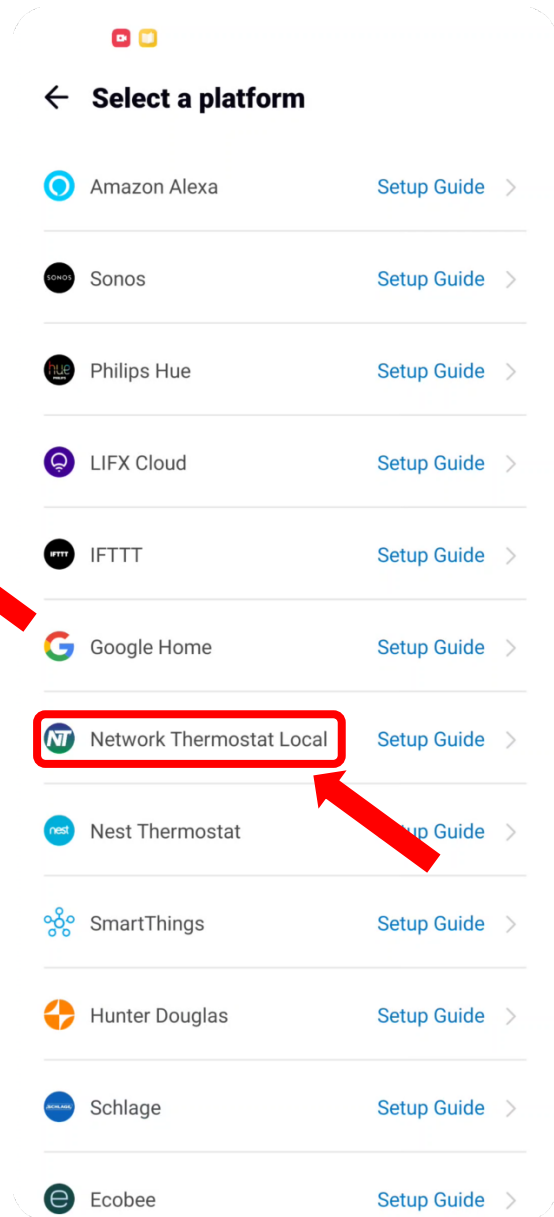

Step 6:

Select Network Thermostat device.

15:17

Network Thermostat Local

Network Thermostat Local

Select the Network Thermostat you want to control.

☒ NETX-92D368(60-8A-10-92-D3-68)

Tips:
Make sure you phone, Linxura device and Network
Thermostat are in the same LAN network.

Save

Step 7:

Log in to your Network Thermostat account
and click 'Save.'

15:17

Network Thermostat Local

Enter Network Thermostat User name and Password.

Network Thermostat User name


Password

Save

3. How to use Linxura to control the Network Thermostat device.


Step 1:

Click the '+' icon to add a Click Action.

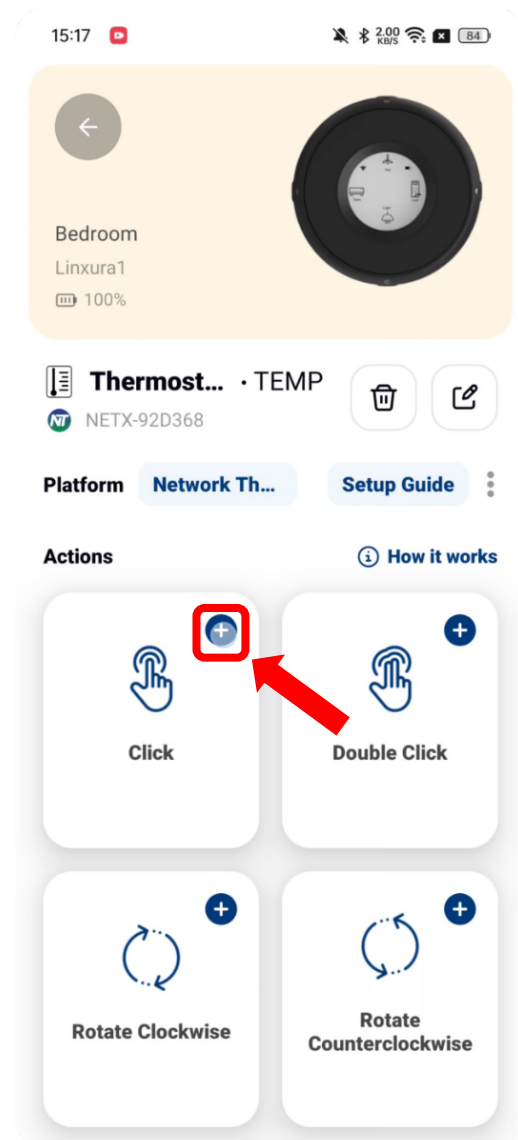


Step 2:


Click 'Mode' and select one of the options.

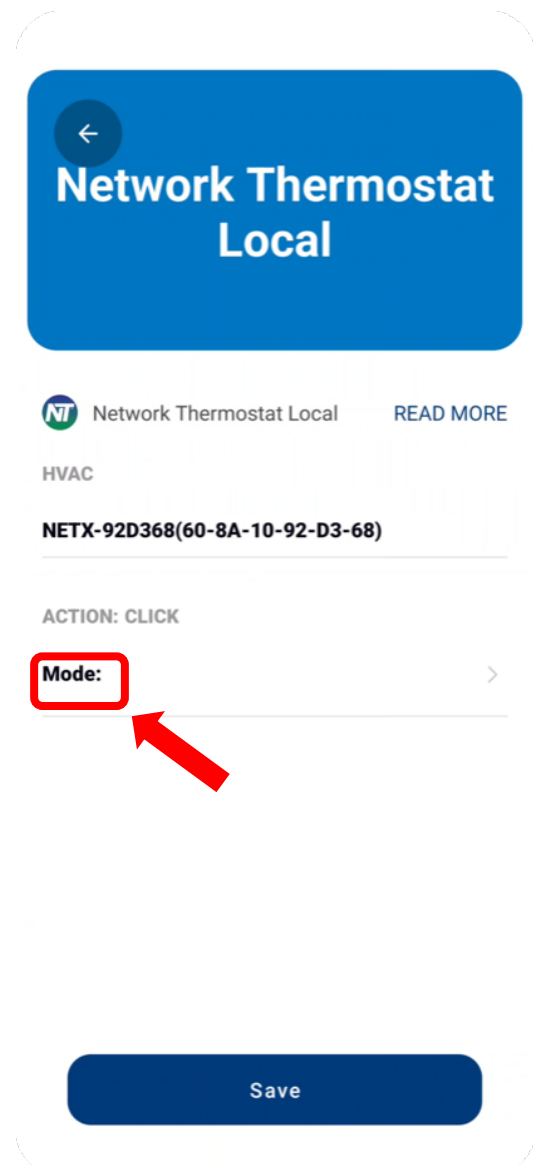

Step 3:
Select one of the Options.

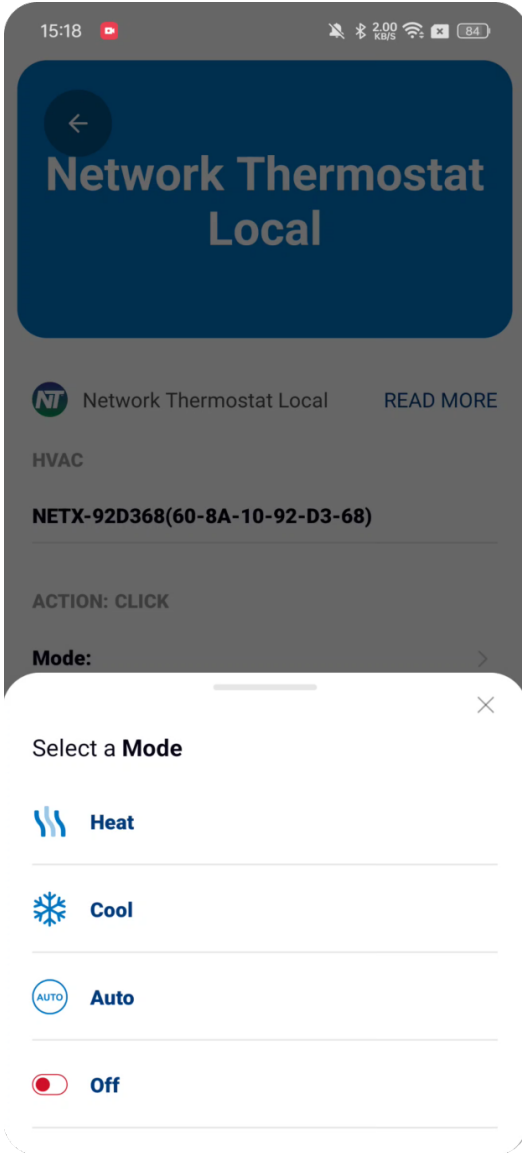


Step 4:
Click 'Temperature'.

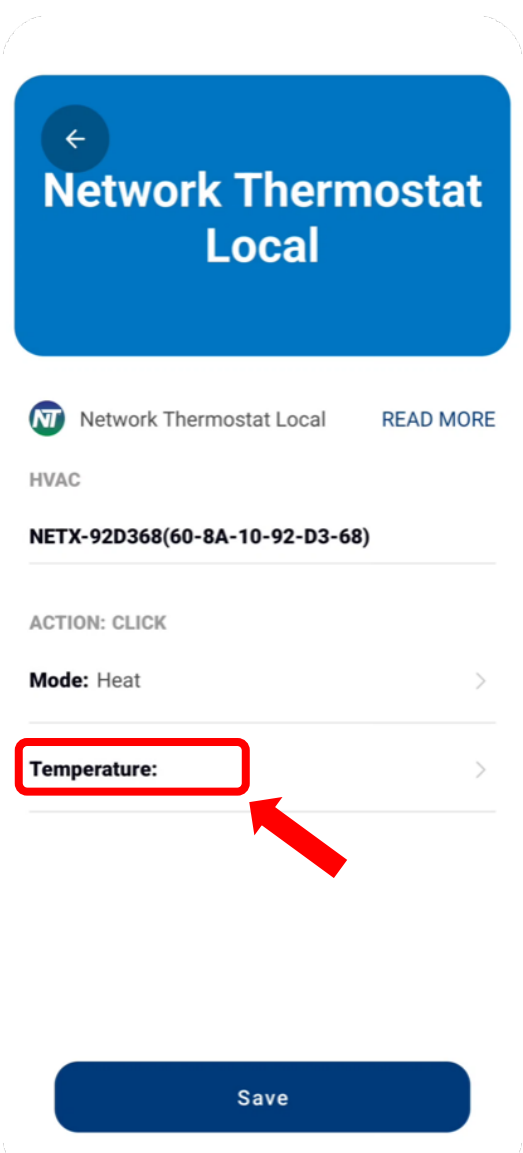


Step 5:

Set the temperature of the Network Thermostat.

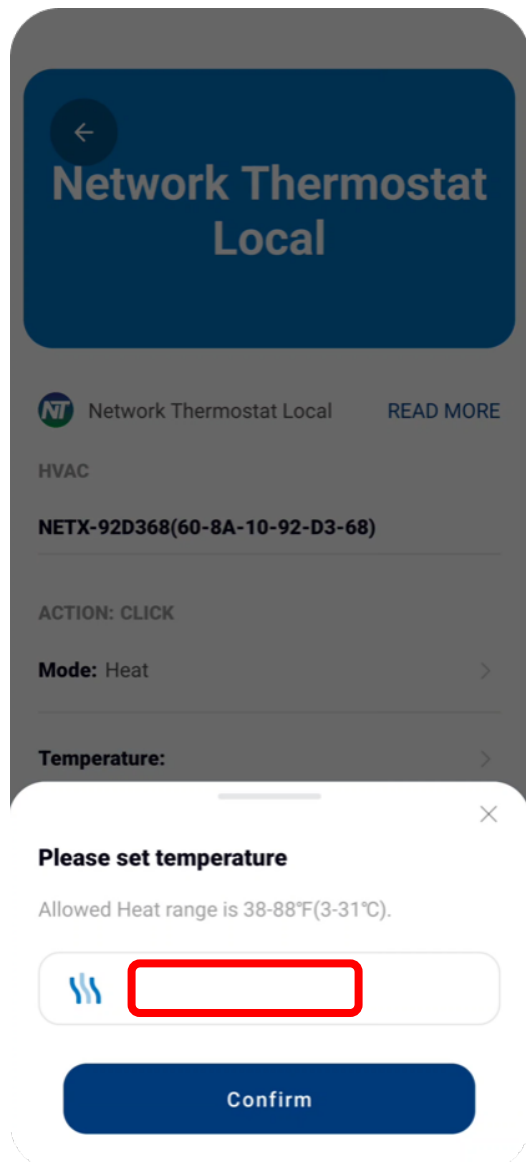

Step 6:

Click the 'Save'.

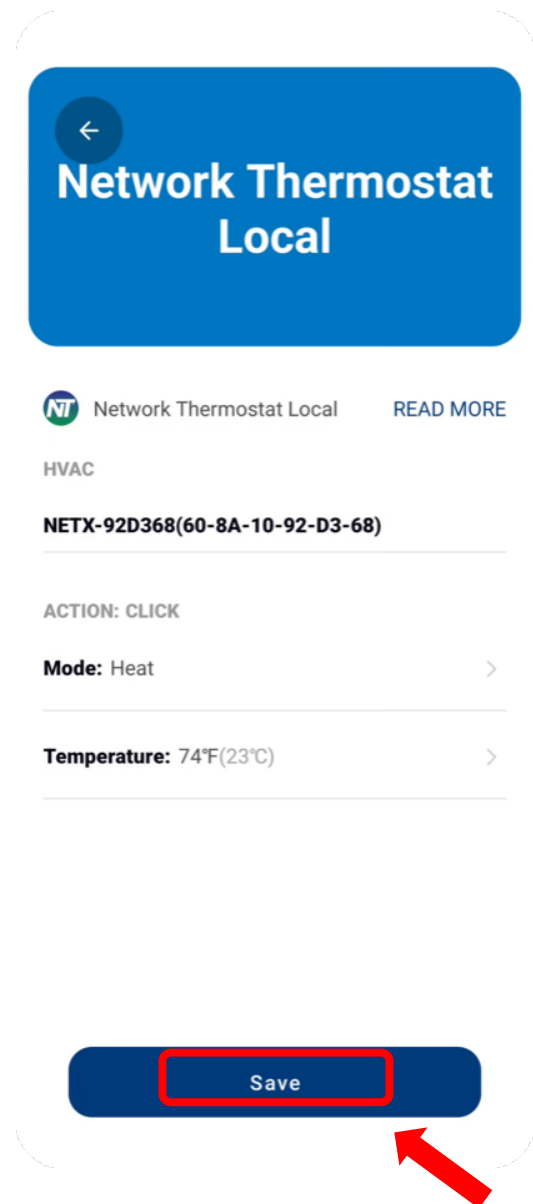

Step 7:

You can follow the same steps to configure Double Click, Rotate Clockwise, and Rotate Counterclockwise.

You can now use Linxura to control your Network Thermostat!

