

Guide Navigation

- 1. Supported Features for Kasa devices.
- 2. How to link Linxura with Kasa.
- 3. How to use Linxura to control Kasa device.

Kasa Setup Guide Video Link:

https://www.linxura.com/pages/Kasa

1. Supported Features for the Kasa devices

Kasa Light Supported Actions

Actions	Supported Mode	Description
Click/Double Click	Mode:	On: Turn on the light
	On, Off,	Off: Turn off the light
	Toggle	Toggle: Switches between on and off
	Set Color:	Set a preferred color for your light
	Set Brightness	Set the Brightness level from 0 (dim) to 100 (bright)
	Set Color	Set the Color Temperature from 2700k (warm) to
	Temperature	6500K (cool)
Rotate	Brightness	Brightness up: Increases the brightness
Clockwise/Rotate	Up/Down	Brightness down: Decreases the brightness
Counterclockwise		
	Color	Color temperature up: Raises the color temperature
	Temperature	Color temperature down: Lowers the color
	up/down	temperature
1		

Kasa Switch Supported Actions

Actions	Supported Mode	Description	
Click/Double Click	Mode:	On: Turn on the switch	
	On, Off,	Off: Turn off the switch	
	Toggle	Toggle: Switches between on and off	
	Set Brightness	Set the Brightness level from 0 (dim) to 100 (bright)	
Rotate	Brightness	Brightness up: Increases the brightness	
Clockwise/Rotate	Up/Down	Brightness down: Decreases the brightness	
Counterclockwise			



Kasa Smart Plug Supported Actions

Actions	Supported Mode	Description
Click/Double Click	Mode:	On: Turn on the smart plug
	On, Off	Off: Turn off the smart plug


1. How to link Linxura with Kasa devices? Make sure your Kasa device is set up in the Kasa app and functioning properly.

Step 1:

Open your Linxura app and then select the Linxura you want to bind with Kasa.




Step 2: Choose a button.

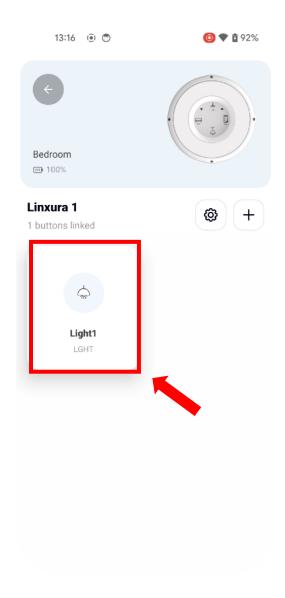


Step 3: Click 'Select platform'.

Step 4: Select 'Kasa' option.

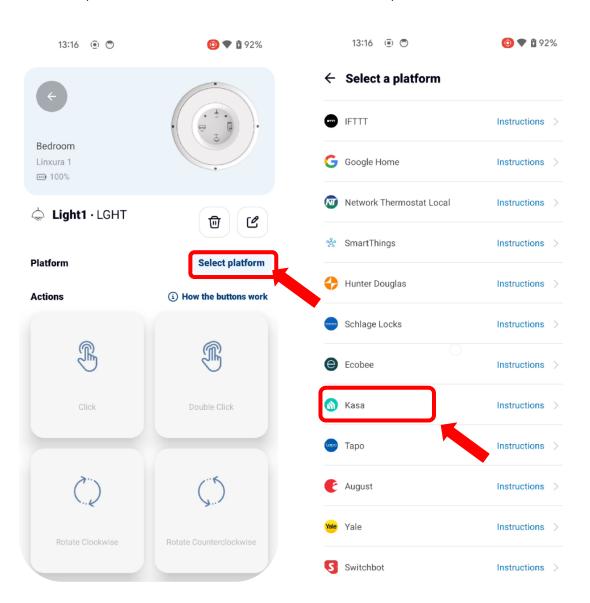

Step 5: Click 'Confirm' to complete the authorization.

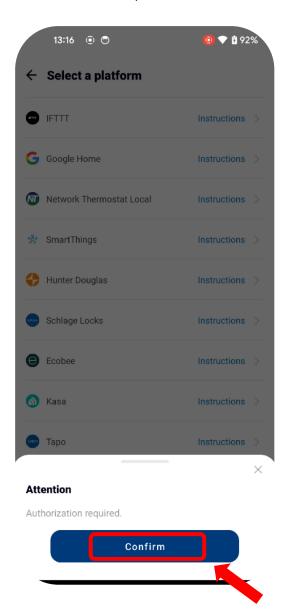


Step 6:

Log in to your Kasa account and authorize Linxura.






Step 7: Select the Kasa device and click 'Save'.

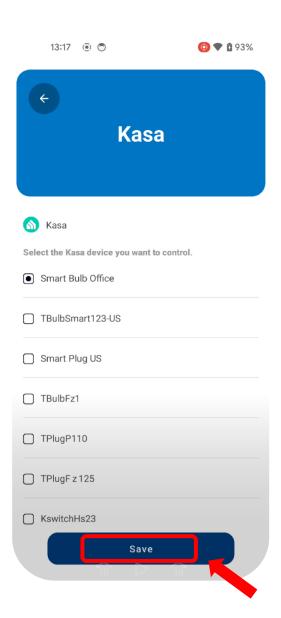


2. How to use Linxura to control the Kasa device.


Step 1: Click the '+' icon to add a Click Action.

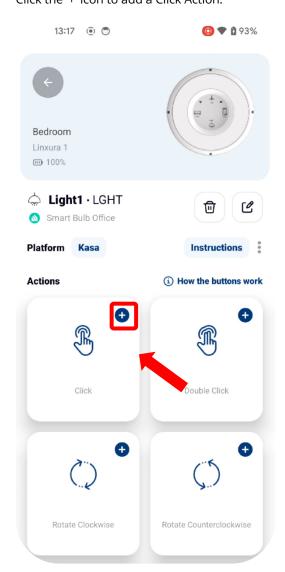


Step 2: Click 'Mode' and select one of the options.

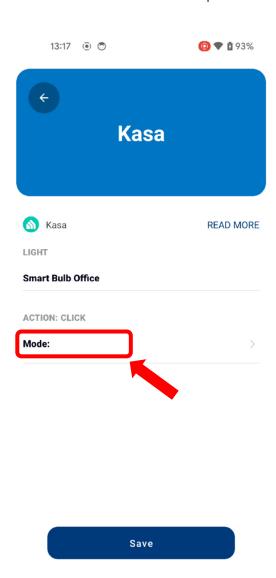


Step 3: Select one of the 'Mode' options.

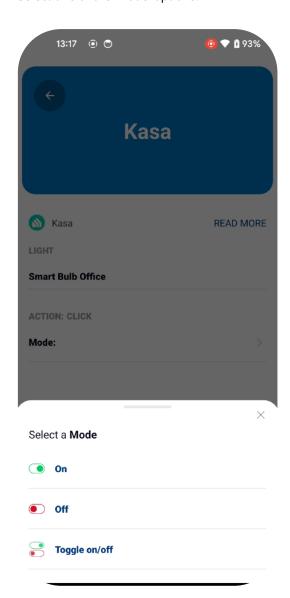

Step 4:
Configure the brightness, color, or color temp erature as needed (optional). **Note that you c** an only configure either color or color tem perature at a time.

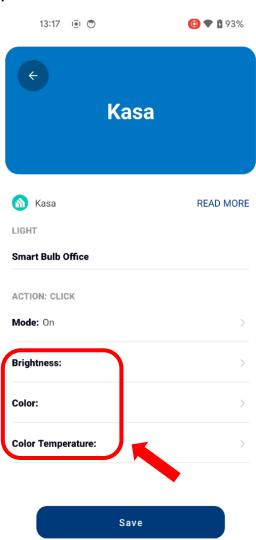

Step 5: Click 'Save' to save the Click Action settings.

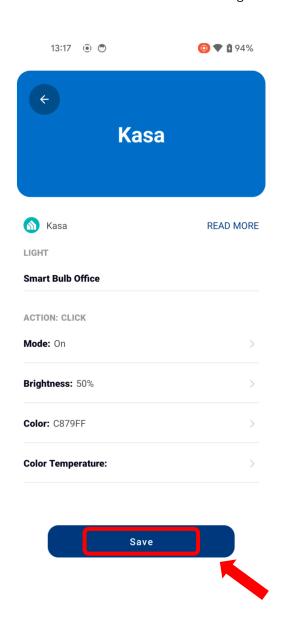

Step 6:

You can follow the same steps to configure Double Click, Rotate Clockwise, and Rotate Counterclockwise.

You can now use Linxura to control your Kasa device!

